Product Specifications

For current product specifications, please to go www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

Trouble Shooting

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counterclockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

Company information and Support

Thank you for your Purchase

Thank you for purchasing the Griffin Adjustable Piano Bench. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing AP5103 Brown/ AP5103 Black into the search bar.


Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.






Assembly Instructions

Step 1 – Flip bench seat upside down, take the legs and wiggle the bolts coming out of the legs. If they are loose, use a Philips head screwdriver to tighten the screw head found at the top of the leg (See Figure 1). Place the screw bolt that is already in the leg in the hole on the side of the bench. Place the washer, lock washer and nut and tighten using a wrench (see Figure 2).

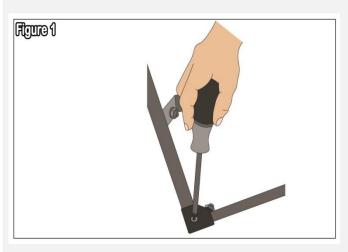



Step 2 – Flip the bench to make the legs stand on the floor, make sure that the top screw heads are screwed in tightly and the nuts of the legs are tight inside. The height adjustment knob when turned right will increase the height of the bench and turning left will lower it as shown in Figure 3. If there is difficulty in raising or lowering the bench height use both knobs.

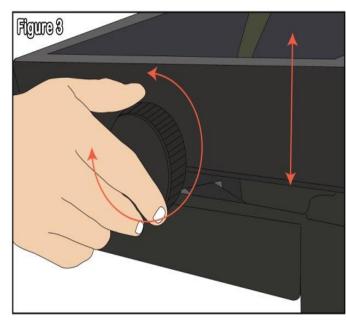

Step 3 – The storage compartment beneath the seat is for light weight storage only, putting heavy items or items that will prevent closing the seat and sitting on the bench may cause for the bottom storage to break or may cause the bench to be unstable. (Figure 4)



Step 4 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

Assembly and Demonstration Video

Please scan the QR Code below for the product demonstration video. Or go to the URI shown here and find the product video. www.Griffin-Stands.com/Videos



