

User Manual AP3505



Thank you for your purchase of your Griffin Portable Sheet Music Stand . Assembly is easy and additional photos to aid in assembly can be found by going to www.griffin-stands.com. Type AP3505 into the search bar. Please read all instructions before beginning assembly.

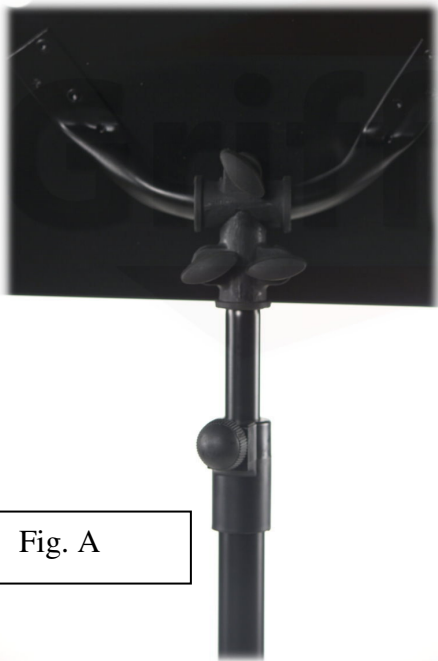


Fig. A

1. Loosen the knob located on the tripod section of the base and extend the legs approximately 18 inches (46cm). Tighten the knob to hold the legs in place. NOTE...overextension or under extension of the legs will cause instability.
2. On the music stand portion of the locate the plastic "T" with three knobs. Loosen the knob holding the "T" to the stand and turn the "T" over. (SEE FIGURE A) This knob is used to adjust the tilt of the stand. Tighten the knob.
3. Loosen the other two knobs on the "T" and place the stand on top of the base. Tighten the knobs.
4. To adjust the height of the stand, loosen the knob located near the top of the base raise or lower the stand and tighten the rod.

