

PRODUCT SPECIFICATIONS

For current product specifications, please go to www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

TROUBLE SHOOTING

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

COMPANY INFORMATION AND SUPPORT

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Griffin Piano Pedal Extender. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing APPD04 into the search bar.

 
Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



Griffin | 11408 Hwy 64 W, Tyler, TX 75704 |
info@griffin-stands.com | www.Griffin-Stands.com



User Manual Model# APPD04

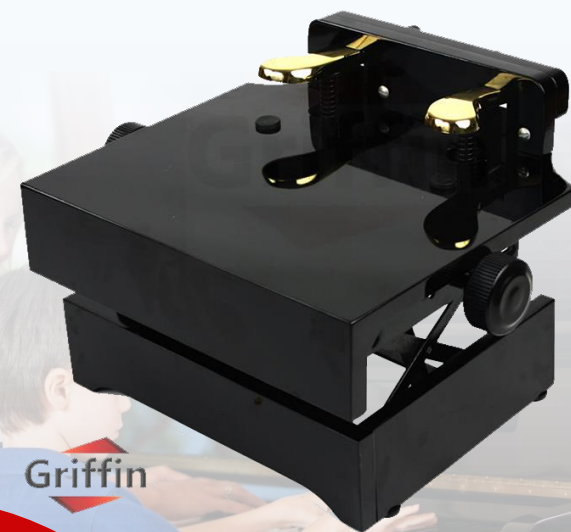


Piano Pedal Extender


ASSEMBLY INSTRUCTIONS

Step 1 – Take the piano pedal extender and test the pedals. If there is squeaking, spray WD40 on the springs and all the moving metal parts. All you need to do is lift up the brass pedals and remove the rubber caps, and spray down the shaft hole the lubrication. This will grease the springs. Then what you can do is flip the pedal extender upside down and also spray the moving metal parts with WD-40

 
Step 2 – To raise the piano pedal, turn both knobs as shown in **Figure 1**.

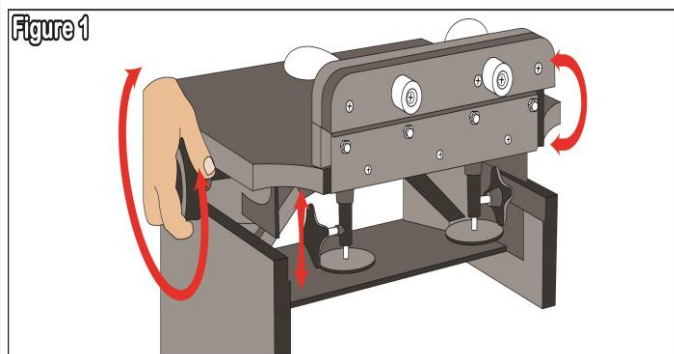

 Step 3 – The pedal extensions are the two rods with a round base and a knob holding the rods. You will see this on the underside of the pedal extender. To adjust this as shown in **Figure 2**, loosen the knob and make sure that the round base is touching the piano pedals itself.

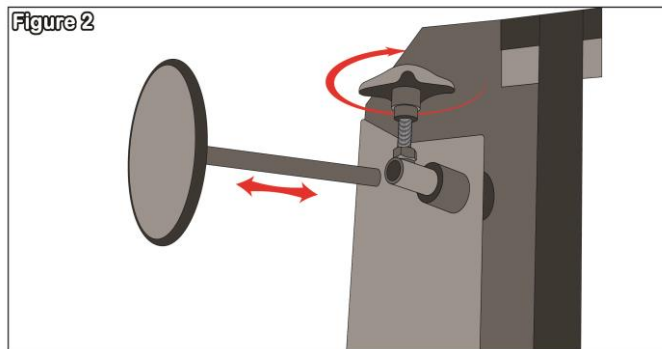

 Step 4 – Make sure that the rubber stopper of the piano pedal extender is leaning against the piano (See **Figure 3**). Failure to place the piano pedal extender's rubber stopper against the piano base can cause the extender to be wobbly, unstable and/or difficulty in pressing down.

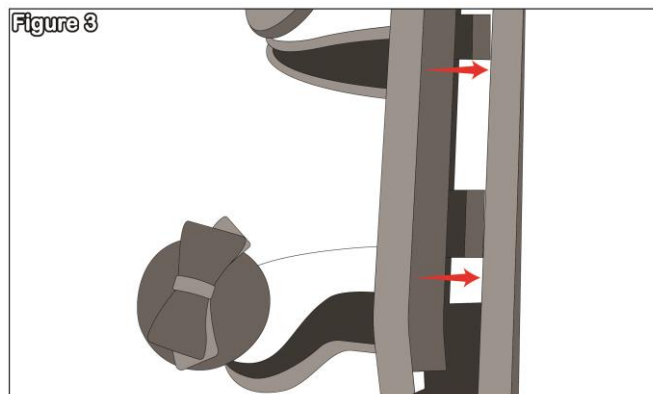

Step 5 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. www.Griffin-Stands.com/Videos



Scan me