

## PRODUCT SPECIFICATIONS

For current product specifications, please to go [www.griffin-stands.com](http://www.griffin-stands.com) and type the model number into the search bar. Locate the product listing to view the current factory specifications.

## TROUBLE SHOOTING

**Performance Issue, Uneven or Unstable-** Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

**Missing Parts-** The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

## COMPANY INFORMATION AND SUPPORT

### THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Griffin Two Leg Hi Hat Stand. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to [www.griffin-stands.com](http://www.griffin-stands.com) and typing H600A into the search bar.

Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



Griffin | 11408 Hwy 64 W, Tyler, TX 75704 |  
[info@griffin-stands.com](mailto:info@griffin-stands.com) | [www.Griffin-Stands.com](http://www.Griffin-Stands.com)



## User Manual Model# H600A



## Two Leg Hi Hat Stand

# ASSEMBLY INSTRUCTIONS



**Step 1** – Take the stand and align the bottom plate to the slots. Screw in the pedal plates on the side by using a drum key. This secures the pedal of the stand itself.

**Step 2** – Spread the legs wide enough to support the stand. (See **Figure 1**) Tighten the knob to where the legs meet near the base to secure the legs. (See **Figure 2**)

**Step 3** - As seen on **Figure 3**, this shows how to insert the hi-hat rod. It may or may not be already inserted through the main pipe of the stand, this goes in the main pipe by screwing the rod in. Then take middle section pipe and insert the hi-hat rod through and over the main stand's top. Secure by turning the knob as shown in **Figure 4** and using a drum key to secure the memory lock in place. This secures the height of the middle pipe of the stand and also prevents the top pipe from slipping.

**Step 4** – Unscrew the top wing nut remove the hi-hat clutch, place your bottom cymbal over the cymbal seat and the top cymbal seat on the hi-hat clutch.



Figure 2


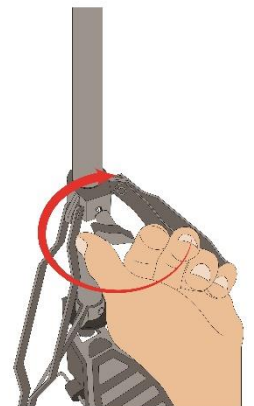


Figure 3

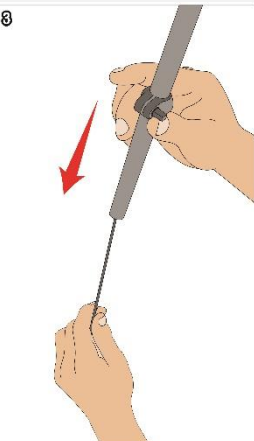

Place the whole assembly back and adjust the hi-hat clutch to your preferred distance over the bottom cymbals (**Figure 5**) and tighten the wing nut. (See **Figure 6**) There is a screw below the cymbal seat which controls the tilt position of the cymbals. You may adjust this according to preferred angle of the cymbals and attach the hi-hat clutch to the top cymbals and insert through the stand, secure by screwing the knob in. **Figure 7 & Figure 8**

**Step 5** – The pedal tension action is controlled by the black circular knob just below where the legs meet. The higher the knob threads up, results in a more firm or stiff pedal action. On the other hand, the lower the knob threads down, makes the pedal action looser or smoother. See **Figure 9**

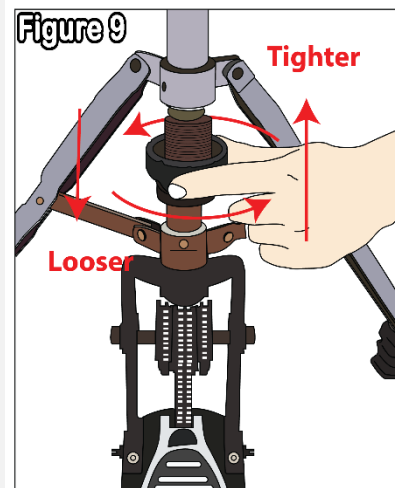


Figure 5

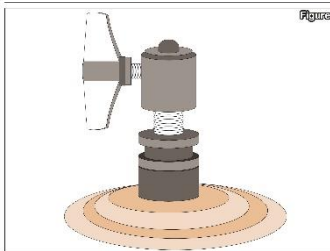


Figure 6

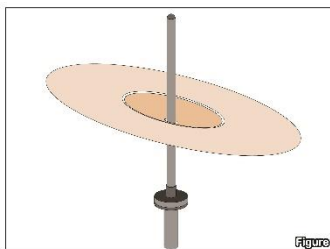


Figure 7

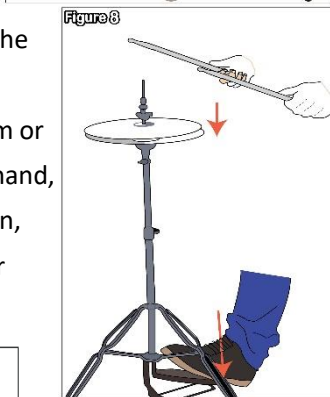


Figure 8

**Step 6** – On the legs where they join together is a knob. Loosen this to rotate the legs to your preference, tighten the knob to secure the placement of the legs. The legs rotate 360 degrees

making it possible to have more flexibility around the stand. This knob also will allow you to fold the legs up. Loosen this knob to pull the legs up to the side of the stand to convert it to a no-leg hi hat stand.

**Step 7** – On the hi-hat pedal there are 2 floor spikes that can be screwed up and down to prevent the pedal from slipping, to add grip to the floor, screw it down on both sides depending on the floor and your preference as well.

**Step 8** – (If using as a no-leg hi-hat stand.) To attach the hi hat stand to another existing stand (not included), you will need to use a drum adapter (not included). You may place the mount on the middle pipe to support the hi hat stand and insert the other end of the adapter to another stand (see demonstration video).

**Step 9** – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

## ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. [www.Griffin-Stands.com/Videos](http://www.Griffin-Stands.com/Videos)



Scan me