

PRODUCT SPECIFICATIONS

For current product specifications, please go to www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

TROUBLE SHOOTING

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

COMPANY INFORMATION AND SUPPORT

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Griffin Hi-Hat Cymbal Stand. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing H80 into the search bar.

Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



Griffin | 11408 Hwy 64 W, Tyler, TX 75704 |
info@griffin-stands.com | www.Griffin-Stands.com



User Manual Model# H80



Hi-Hat Cymbal Stand

ASSEMBLY INSTRUCTIONS

Step 1 – Take the main stand and spread the legs out as shown in **Figure 1**. Turn the knob near the base of the stand to secure the legs (See **Figure 2**).

Figure 1



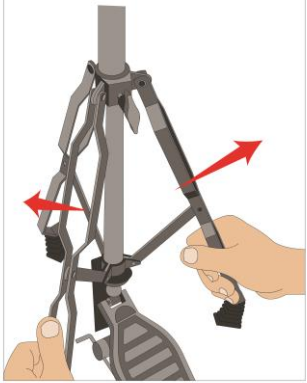


Figure 2

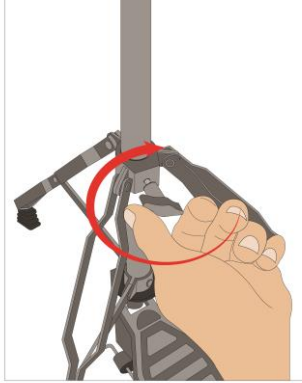


Step 2 – **Figure 3** shows how to insert the base support (L-shaped rods) of the pedal. Insert the base support's metal rod through the holes.

Figure 3

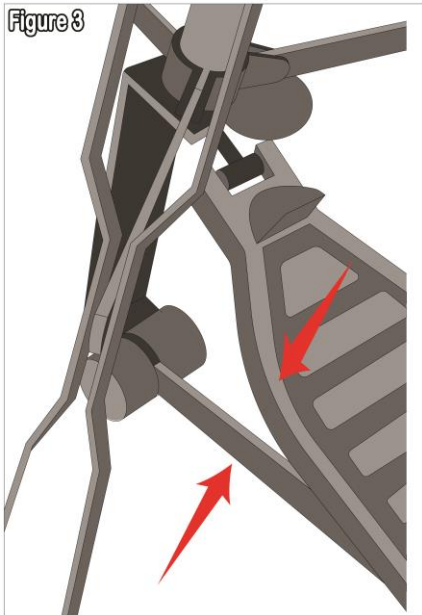


Step 3 – As seen on **Figure 4**, this shows how to insert the hi-hat rod. It may or may not be already inserted through the main pipe of the stand, this goes in the main pipe by screwing the rod in.

Figure 4

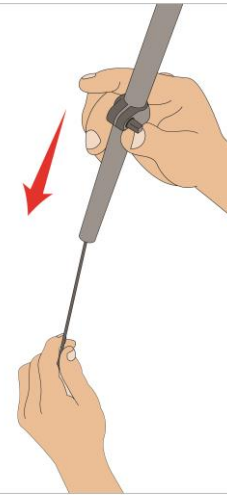

Step 4 – Then take middle section pipe and insert the hi-hat rod through and over the main stand's top. Secure by turning the knob as shown in **Figure 5**.

Figure 5

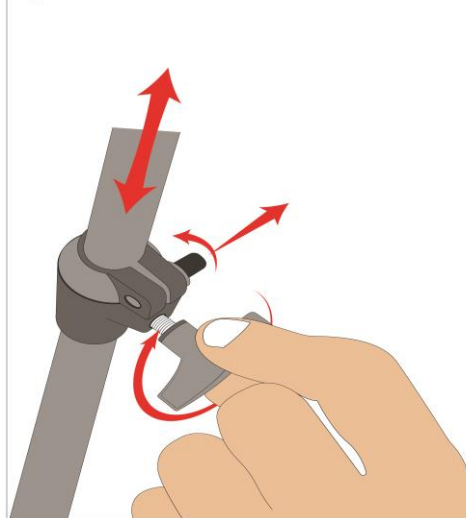

Step 5 – Then you can now place the bottom cymbals over the bottom cymbal seat (Shown in **Figure 6**) and attach the hi-hat clutch to the top cymbals and insert through the stand, secure by screwing the knob in. Near the base of the bottom cymbal seat is a little knob that can control the tilting angle of the cymbals, to use this just turn the knob.

Step 6 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

Figure 6



ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. www.Griffin-Stands.com/Videos

