

PRODUCT SPECIFICATIONS

For current product specifications, please go to www.FattoadPro.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

TROUBLE SHOOTING

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

COMPANY INFORMATION AND SUPPORT

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Fat Toad DJ Workstation Stand. Your product comes with a 1-year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new stand. Pictures that may aid in assembly can be found by going to www.Fattoadpro.com and typing LS-713 into the search bar.

Fat Toad™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Fat Toad™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



User Manual Model# LS-713



DJ Workstation Stand

ASSEMBLY INSTRUCTIONS

Step 1 - Take the tripod stand and open the legs wide, push it down as this will be the base of the stand. Make sure to tighten the knob where the tripod legs meet on the stand. (See **Figure 1**). Its very important that the legs must be spread all the way out and down for max stability.

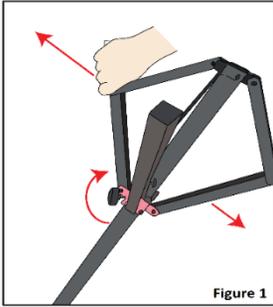


Figure 1

Step 2 - Take **Part A** (folding mounting arms) as labeled in the Parts List and insert it on the top of the main shaft (**Part E**). The height of **Part A** or the mount for mixers is fully adjustable by adjusting it along the shaft where your desired height would be. When you are satisfied on where the mount is on the main shaft, tighten the knob as shown in **Figure 2**.

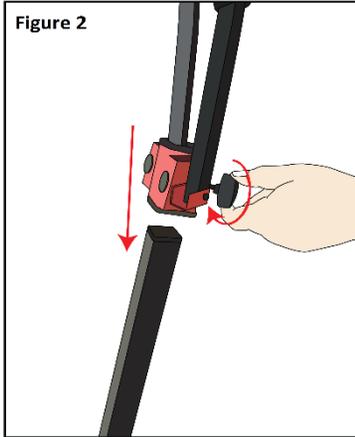


Figure 2

Step 3 - Push down the arms of **Part A** (folding mounting arms) as seen on **Figure 3**.

Step 4 - Take **Part B** (controller mount) and slide it into the main shaft. This is also completely adjustable to which height you prefer. Once you are satisfied where the controller mount is situated, tighten the knob to secure **Part B**. (See **Figure 4**)

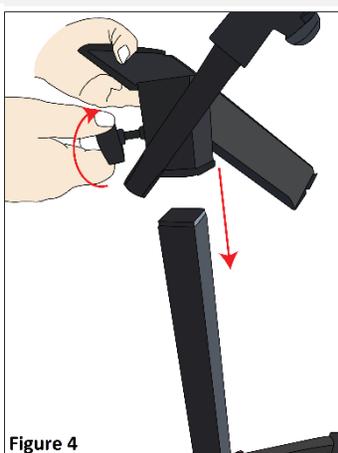
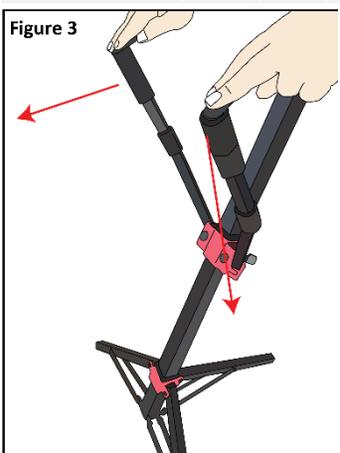


Figure 4

Step #5 - Get **Part D** which is the boom mount for the top music plate (**Part C**) and insert it through the small post of **Part B**, this can also be adjusted to your preferred height. Tighten the knob to secure the boom mount as shown in **Figure 5**.

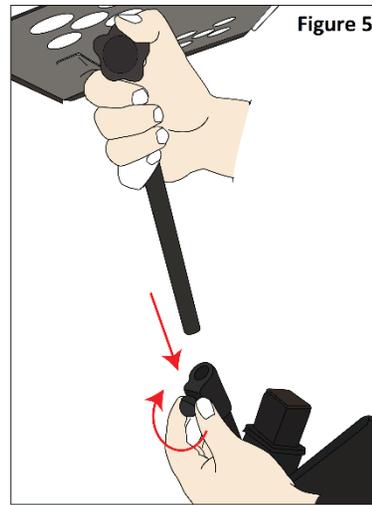


Figure 5

Step 6 - Just below the metal music plate there is a knob, loosen this to adjust the angle of the plate and tighten to secure the angle. (See **Figure 6**)

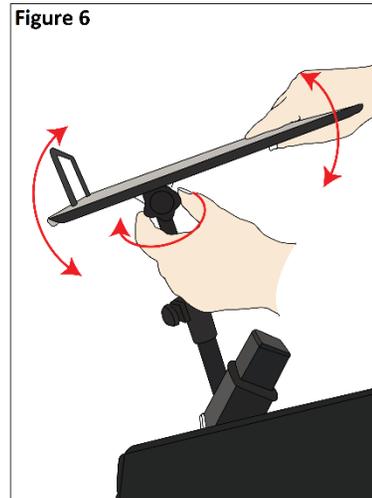



Figure 6

Step 7 - If the book plate is spinning from left to right or vice versa, unmount the boom arm (**Part D**) and push down the coupler to where the insert is mounted, you can use a hammer to push it down and secure. This should solve the issue of the spinning book plate.



Figure 7

Step 8 - For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use confirm assembly and structure of the product is correct.

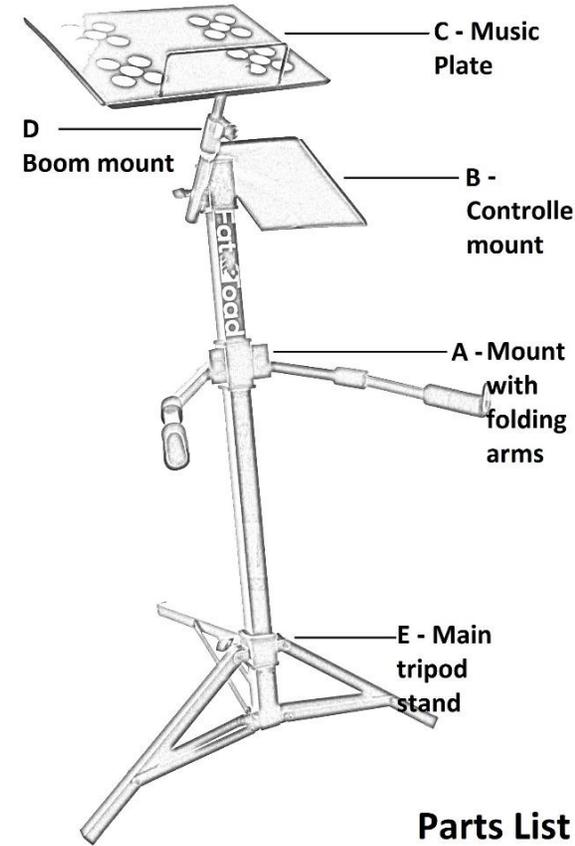

Parts List

ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. www.FattoadPro.com/Videos



Scan me