



User Manual S80 / S100

Thanks for purchasing the Griffin Snare Drum Stand. Assembly is easy. Pictures that may aid in your assembly can be found by going to www.griffin-stands.com and typing S80 or S100 based on your model into the search bar.

1. Loosen the tripod extension knob and extend the tripod approximately 14 inches (35.5cm). Under extension may cause stand instability.
2. Extend the top portion of your drum stand. The post on this section comes packaged facing the wrong way. Loosen the tilt adjustment knob and move this rod 180 degrees. Tighten the knob. This knob can be loosened later to adjust the tilt of your snare. Just remember to tighten the knob after adjusting the tilt.
3. Loosen the height adjustment knob located on the top of the tripod section and insert the rod from the top portion of the drum stand. Tighten the knob. Loosen this knob and raise or lower the post to adjust the height. Tighten the knob when the desired height is reached.
4. Use the black knob to adjust for drum size. Put your drum on top, adjust the tilt and **YOU'RE READY TO ROCK!**

