

PRODUCT SPECIFICATIONS

For current product specifications, please go to www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

TROUBLE SHOOTING

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

COMPANY INFORMATION AND SUPPORT

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Griffin Double Tom Cymbal Stand. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing TS300 into the search bar.

Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



Griffin | 11408 Hwy 64 W, Tyler, TX 75704 |
info@griffin-stands.com | www.Griffin-Stands.com




User Manual Model# TS300




Double Tom Cymbal Stand

ASSEMBLY INSTRUCTIONS


Step 1 – Take the stand and turn the knob where the legs meet at the center of the stand to loosen. Spread the legs wide and tighten the knob to secure the stand as shown in **Figure 1**.

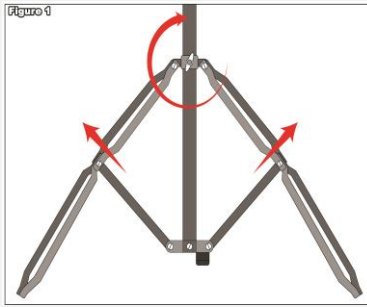


Step 2 – Take the flat pipe bracket and insert the middle stand pipe through it (See **Figure 2**). Then insert the middle pipe in the center of the stand. Use the turn knob just below the center stand to keep the height in place and use a drum key to tighten the bolt at the back of the bracket to keep it in place.

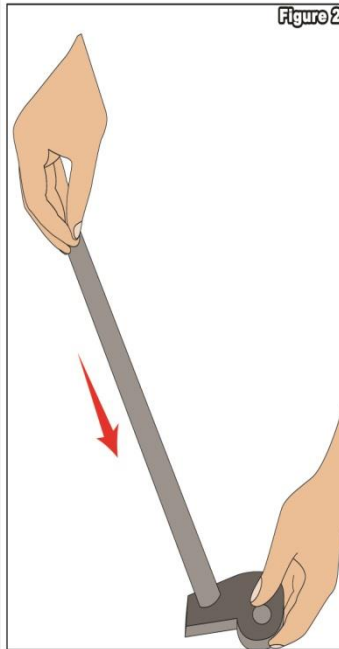


Step 3 – Get the two tom drum mounts and insert each in the flat pipe bracket, tighten the bolt in front of the bracket with a drum key to secure the height of the tom drum mounts in place as shown in **Figure 3**.

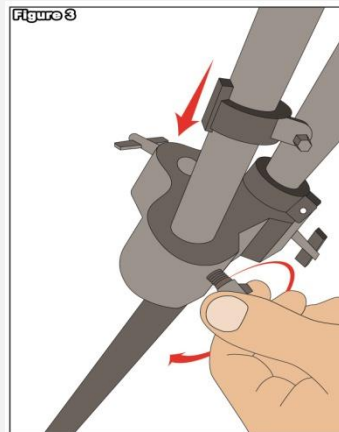



Step 4 – **Figure 4** shows how to adjust the tom drum inserts. These adjustable gear locking mounts has knobs that needs to be loosen to allow the gear locking mechanism to be adjusted depending on your preferred angle. Tighten the knob to keep the angle in place.

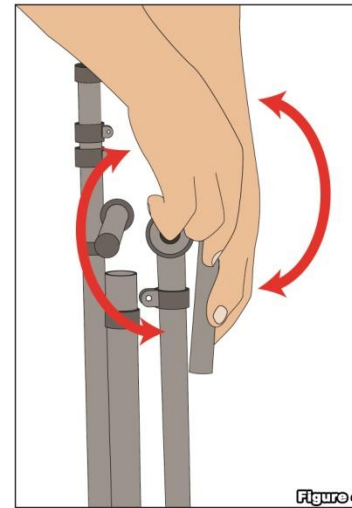


Step 5 – Take the tom drum and insert the tom drum mount in the drum inserts as shown in **Figure 5**.

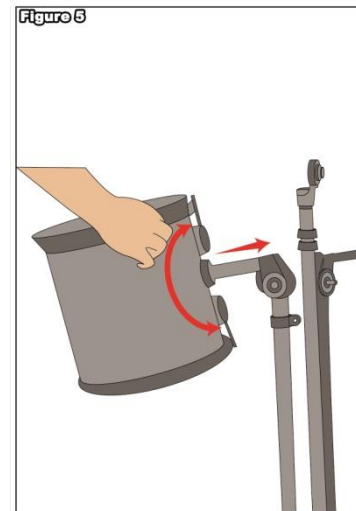

Step 6 – Loosen the knob at the top of the tripod stand and insert the height adjustment rod. And another knob near the top to adjust the angle (See **Figure 6** and **7**).

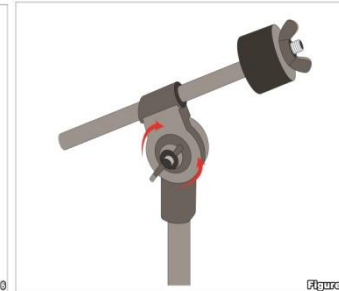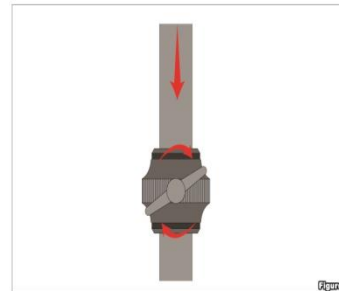

Step 7 – Remove the wingnut on the very top and place your cymbal on top. Place back the cymbal felts and the wingnut as seen on **Figure 8**.

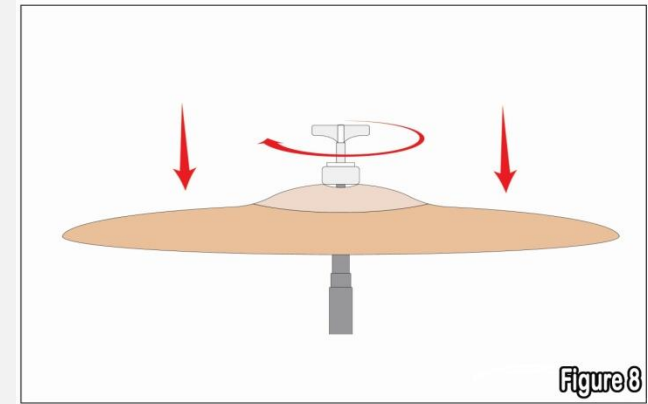


Step 8 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

***Please note that under extending the legs of the stand can cause the stand to wobble or imbalance. During assembly make sure that the weight of the drums and cymbals is pointing to the front leg.

ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. www.Griffin-Stands.com/Videos

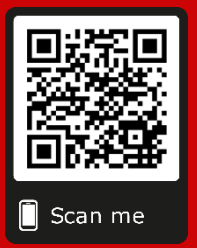

Scan me