PRODUCT SPECIFICATIONS

For current product specifications, please to go www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

TROUBLE SHOOTING

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counterclockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

COMPANY INFORMATION AND SUPPORT

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing the Griffin Double Studio Mixer Stand. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing XX-396A into the search bar.

Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.






User Manual Model# XX-396A




Double Studio Mixer Stand

ASSEMBLY INSTRUCTIONS

Step 1 – Locate the leg assembly within Part A (main frame) and as seen on FIGURE 1, unfold the legs of the stand until they lock into place.

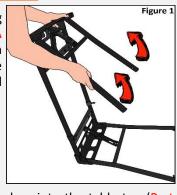


Step 2 – Insert the chrome legs into the table top (Part D). Extend the legs to the desired height and screw the knob (Part E) into the threaded hole as seen in FIGURE 2. If the table is slightly off level, you can unscrew the feet to make the table level. Extend the table to your desired width and lock into place by tightening the knobs as seen in FIGURE 3.

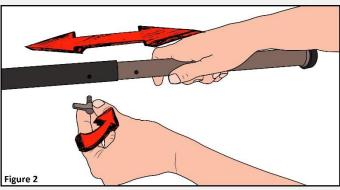




Step 3 - Locate the pair of arm attachment brackets (Part C). Take 1 and place the bracket with 2 knobs (Part D) on crossbar and tighten the knobs as shown in FIGURE 4. Remove the remaining knobs on brackets. these Locate the top arms and align the holes in the arm to the bracket. Insert the knob and put the spring back over the knob. Then screw the knob back into the bracket.

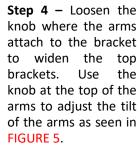






Step 5 – Loosen the small knobs on the arms to adjust the arms forward and backwards as shown in FIGURE 6. Tighten the knobs when your desired adjustment is achieved.

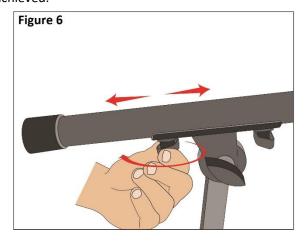

Step 6 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

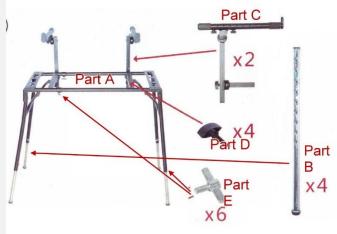

ASSEMBLY AND DEMONSTRATION VIDEO

Please scan the QR Code below for the product demonstration video. Or go to the URL shown here and find the product video. www.Griffin-Stands.com/Videos



