

Product Specifications

For current product specifications, please go to www.griffin-stands.com and type the model number into the search bar. Locate the product listing to view the current factory specifications.

Trouble Shooting

Performance Issue, Uneven or Unstable- Make sure all nuts and bolts are tight on the product. If they are, then loosen all nuts and bolts 1 full turn counter-clockwise, then go back and tighten each bolt only ½ turn tight. Then do a final tighten turn for another ½ turn tight. Next, Make sure there are not any missing nuts or bolts. Third, ensure all parts on the product are not broken or defective. Finally, Re-read the assembly instructions or watch the product demonstration video to ensure you have correctly assembled or are using the product properly with factory specifications.

Missing Parts- The pictures, videos and images shown in this manual might have changed style or count due to the product being redesigned. So in rare cases the part may no longer be included or of a different style. However, if you think you are missing a part that is necessary to the assembly and use of your product, then first carefully double check all packaging for any parts you think are missing. Some parts might be hiding in the packaging or loose in an inner box.

Company information and Support

Thank you for your Purchase

Thank you for purchasing the Griffin Piano Bench. Your product comes with a 1 year factory warranty from purchase date. Please read all assembly instructions prior to assembling your new cart. Pictures that may aid in assembly can be found by going to www.griffin-stands.com and typing AP5101 Brown/ AP5101 Black into the search bar.

Griffin™ stands and accessories are manufactured in several innovative factories responsible for developing products that address the newest needs and trends of the current market. We take pride in the Griffin™ brand and endeavor to be on the forefront of the musical stands and musical and lighting accessories market.



Griffin | 11408 Hwy 64 W, Tyler, TX 75704 |
info@griffin-stands.com | www.Griffin-Stands.com



HAND TIGHTEN ALL NUTS FIRST! Do not use the wrench until all nuts are installed and are hand tightened.



User Manual
**Model# AP5101 Brown/
AP5101 Black**



Piano Bench

Assembly Instructions

Step 1 - Take the piano bench legs and take off the rubber protection sleeves on the tip of the screw bolts, once the rubber protection sleeves are removed, wiggle the bolts coming out of the legs. If they are loose, use a Philips head screwdriver to tighten the screw head found at the top of the leg (See **Figure 1**). Place the screw of the legs to the bracket and make sure that it is the correct side, as shown in **Figure 2**.

Figure 1



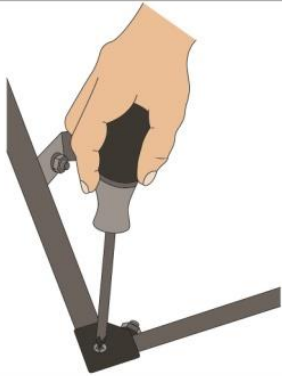


Figure 2

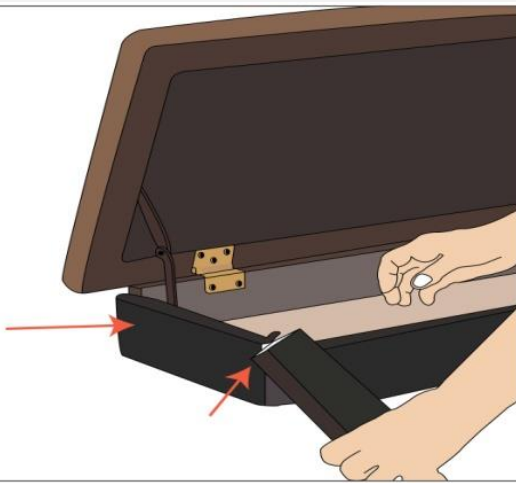


Step 2 – Place the washer then the nut and use a wrench to tighten in place (see **Figure 3**). Also check the top screw of the legs, make sure it is screwed down to avoid the bench from being wobbly as said in Step 1.

Figure 3

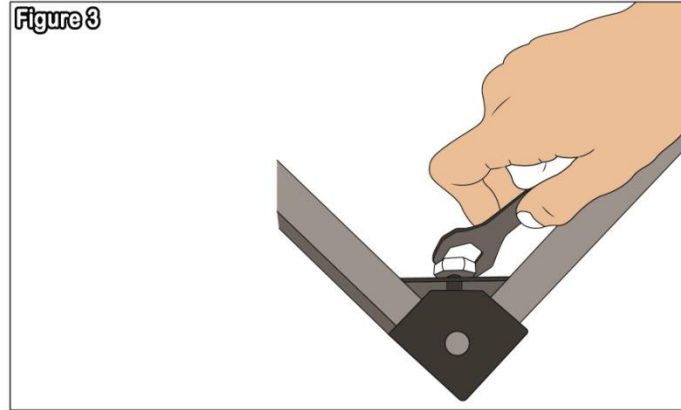

Step 3 – The storage compartment beneath the seat is for light weight storage only, putting heavy items or items that will prevent closing the seat and sitting on the bench may cause for the bottom storage to break or may cause the bench to be unstable. (See **Figure 4**)

Figure 4

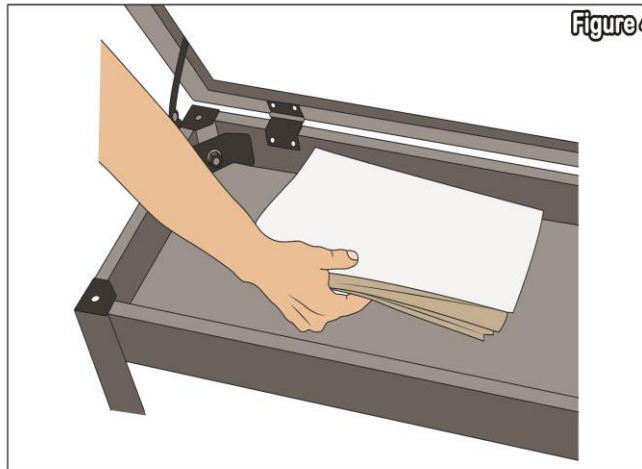

Step 4 – For safety reasons, please always make sure to test the stability and safety of the product before use. Double check all nuts and bolts, knobs and connectors, make sure that these are tight and securely fastened before use of your product. Test the product under light use or light loads the first time to confirm assembly and structure of the product is correct.

Assembly and Demonstration Video

Please scan the QR Code below for the product demonstration video. Or go to the URI shown here and find the product video. www.Griffin-Stands.com/Videos



Scan me